

EEP Submission Tool Manual

EEP Submission Tool Manual V 1.5

San Ramon, CA, USA

EEP Submission Tool Manual

REVISION HISTORY

Ver.	Editor	Change	Date
0.1	AP	Creation	07/09/2018
0.2	AP	Corrections after feedback incorporation	27.11.2018
0.3	AP	Small editorial corrections, test container and IP representation generation added, uploading saved work described	09.01.2019
1.4	AP	Editorial update on changes made	24.03.2022
1.5	AP	Editorial update on changes made	14.07.2025

Copyright © EnOcean Alliance Inc. (2015-2025). All rights reserved.

DISCLAIMER

The information within this document is the property of the EnOcean Alliance and its use and disclosure are restricted. Elements of the EnOcean Alliance specifications may also be subject to third party intellectual property rights, including without limitation, patent, copyright or trademark rights (such a third party may or may not be a member of the EnOcean Alliance.)

The EnOcean Alliance is not responsible and shall not be held responsible in any manner for identifying or failing to identify any or all such third party intellectual property rights. This document and the information contained herein are provided on an “as is” basis and the EnOcean Alliance disclaims all warranties express or implied, including but not limited to

- (1) any warranty that the use of the information herein will not infringe any rights of third parties (including any intellectual property rights, patent, copyright or trademark rights, or
- (2) any implied warranties of merchantability, fitness for a particular purpose, title or non-infringement.

In no event will the EnOcean Alliance be liable for any loss of profits, loss of business, loss of use of data, interruption of business, or for any other direct, indirect, special or exemplary, incidental, punitive or consequential damages of any kind, in contract or in tort, in connection with this document or the information contained herein, even if advised of the possibility of such loss or damage. All Company, brand and product names may be trademarks that are the sole property of their respective owners. The above notice and this paragraph must be included on all copies of this document that are made.

EEP Submission Tool Manual

The EnOcean Alliance “EEP submission tool manual” is available free of charge to companies, individuals and institutions for all non-commercial purposes (including educational research, technical evaluation and development of non-commercial tools or documentation.)

This specification includes intellectual property („IPR“) of the EnOcean Alliance and joint intellectual properties („joint IPR“) with contributing member companies. No part of this specification may be used in development of a product or service for sale without being a participant or promoter member of the EnOcean Alliance and/or joint owner of the appropriate joint IPR.

These errata may not have been subjected to an Intellectual Property review, and as such, may contain undeclared Necessary Claims.

EnOcean Alliance Inc.
2603 Camino Ramon, Suite 200
San Ramon, CA 94583
USA
Graham Martin
Chairman & CEO EnOcean Alliance

EEP Submission Tool Manual

Table of Contents

1. Introduction	5
1.1. General.....	5
1.2. System requirements.....	5
1.3. Terms & Abbreviations.....	5
1.4. References	6
1.5. EEP approval process.....	6
2. Basic screen description	7
2.1. Home screen.....	7
2.2. Submitter data.....	8
2.3. Array definition.....	9
2.4. Summary.....	12
2.5. Saving all necessary files for EEP submission.....	13
2.6. EEP submission	15
3. Create a new unidirectional VLD profile.....	16
3.1. Profile metadata	16
3.2. Functionality definition	17
4. Add a new family member to an existing VLD	18
4.1. Profile data.....	18
4.2. Functionality definition	21
5. Create a new VLD family	22
5.1. Profile metadata	22
5.2. Tables definition.....	23
5.3. Functionality definition	25
6. Upload a saved work file	26
7. Upload an XML file	27

EEP Submission Tool Manual

1. Introduction

1.1. General

The EEP Submission Tool is a web-based application, which helps companies designing and submitting a new EEP according to the requirements of a new or redesigned EnOcean device. As EEPs are the fundament of interoperability between EnOcean devices of all different manufacturers, profile definitions have to be clear and understandable. The tool guides the user through the design of the EEP with the goal to reduce the workload for him and the approval process. Xml-data required for automated reading by gateways or development tools will be generated as well as a representation in a pdf file, the test containers and the IP representation.

It is mandatory to read the chapter EEP-Guidelines in [1] to be able to define an EEP, which will be accepted by the EAC.

If you need support for defining an EEP please contact your module manufacturer or Graham Martin graham.martin@enocean-alliance.org who can help you finding a paid consultant. If you need help with the usage of the EEP tool or you want to report a bug, please contact Armin Pelka by mail certification@enocean-alliance.org .

1.2. System requirements

The EEP Submission tool is a web-based application and is optimized for the following browsers:

- Google Chrome
- Firefox
- Opera

It is NOT recommended to run the EEP-tool via Internet Explorer. Verification was not successful.

If not all data fields are shown on your screen, scroll down, please.

1.3. Terms & Abbreviations

1BS – EnOcean 1 Byte Communication

4BS – EnOcean 4 Byte Communication

Choice – Unique identification of EnOcean radio telegram types (RPS, 1BS, 4BS ...); equivalent with RORG

Client – Bidirectional SMART ACK Device

Data – Payload of ERP telegrams or ESP packets

EAC – EnOcean Equipment Profiles Approval Committee

EEP – EnOcean Equipment Profiles

ERP – EnOcean Radio Protocol

ESP – EnOcean Serial Protocol

EEP Submission Tool Manual

EURID – EnOcean Unique Radio Identifier, a unique and non-changeable identification number assigned every EnOcean transmitter during its production process.

HTML – Hyper Text Markup Language; HTML can be displayed using a internet browser

MMI – Man Machine Interface

MSC – Manufacturer Specific Communication

ORG – Organizational number for EnOcean radio telegram types (out-dated with EEP 2.1; used for ESP2 interface)

RECOM – Remote Commissioning

REMAN – Remote Management

RMCC – Remote Management Control Commands

ROrg – Radio ORG = organization number for EnOcean radio telegram types (new with EEP 2.1); equivalent with 'Choice'

RPC – Remote Procedure Calls, used in Remote Management

RPS – EnOcean telegram type for Repeated Switch Communication

SMART ACK – SMART Acknowledge EnOcean standard for energy-optimized bidirectional transmission

TWG – EnOcean Alliance Technical Working Group

VLD – EnOcean Variable Length Data telegram

XML – Extensible Markup Language; designed to transport and store data

XSL– Extensible Stylesheet Language; XML based language to visualize XML (data)

1.4. References

[1] EnOcean Equipment Profiles, EnOcean Alliance
<https://www.enocean-alliance.org/eep/>

[2] Smart Acknowledge specification, EnOcean Alliance
<https://www.enocean-alliance.org/smartack/>

[3] Security of EnOcean Networks specification, EnOcean Alliance
<https://www.enocean-alliance.org/sec/>

[4] Remote Management, EnOcean Alliance
[https:// www.enocean-alliance.org/reman/](https://www.enocean-alliance.org/reman/)

1.5. EEP approval process

The EEP approval process is described in [1].

EEP Submission Tool Manual

2. Basic screen description


This chapter describes principles and screens for all supported actions.

2.1. Home screen

To start the design of an EEP, enter the home URL of the EEP submission tool

<http://enocean-alliance.org/eed/submission/tool/>

In the current version, no authentication is necessary. This is planned for future releases.

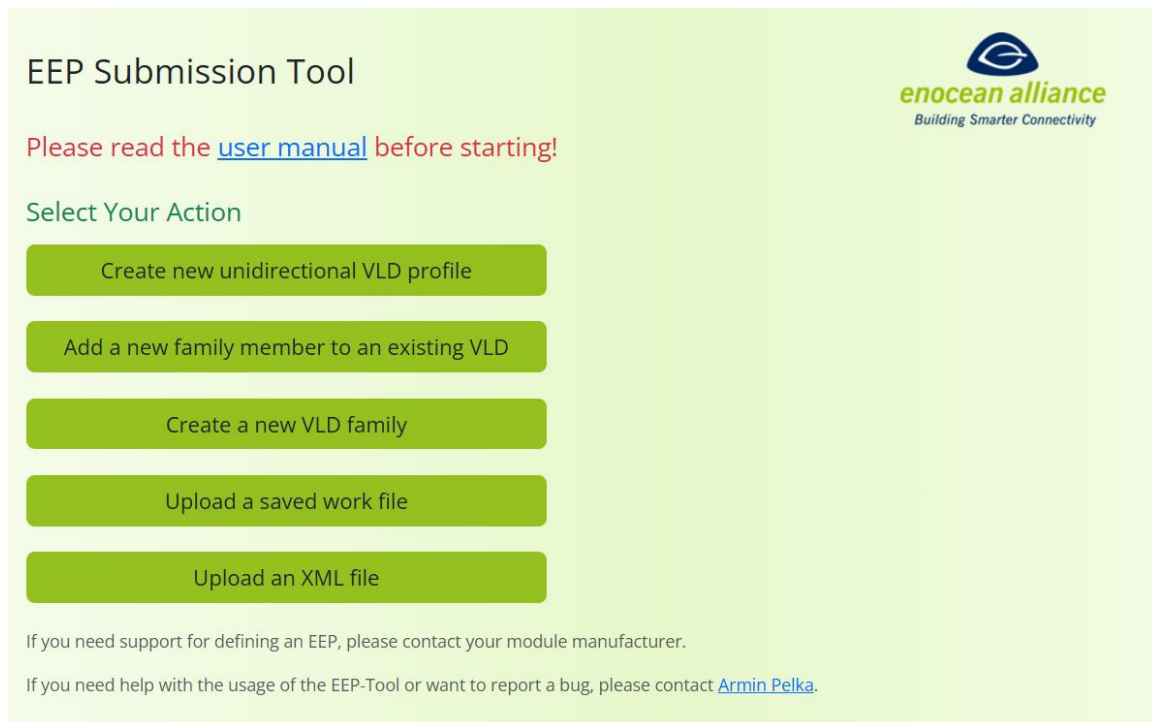

The user can select his desired action:


- Create a new unidirectional VLD profile
Use this to create a new single VLD profile, not a family.
- Add a new family member to an existing VLD
Use this to add a new family member to an existing VLD profile. In the next step, the family function number can be set and new type(s) can be created. If the family is not in the data base, use the “Create a new VLD family” button and enter all data for this family member there. We do not import all the legacy data in the data base.
- Create a new VLD family
Creation of a new VLD profile family (new VLD function number)
- Upload a saved work file
The user selects a saved work file in order to return to a previous item of work, so there is no need to repeat the whole process if a change is needed.

EEP Submission Tool Manual

- Upload an XML file
The user selects an existing EEP XML file and is then able to create a pdf file, a test container, or the IP representation.

2.2. Submitter data

For creating profiles, the user starts by filling in the submitter data.

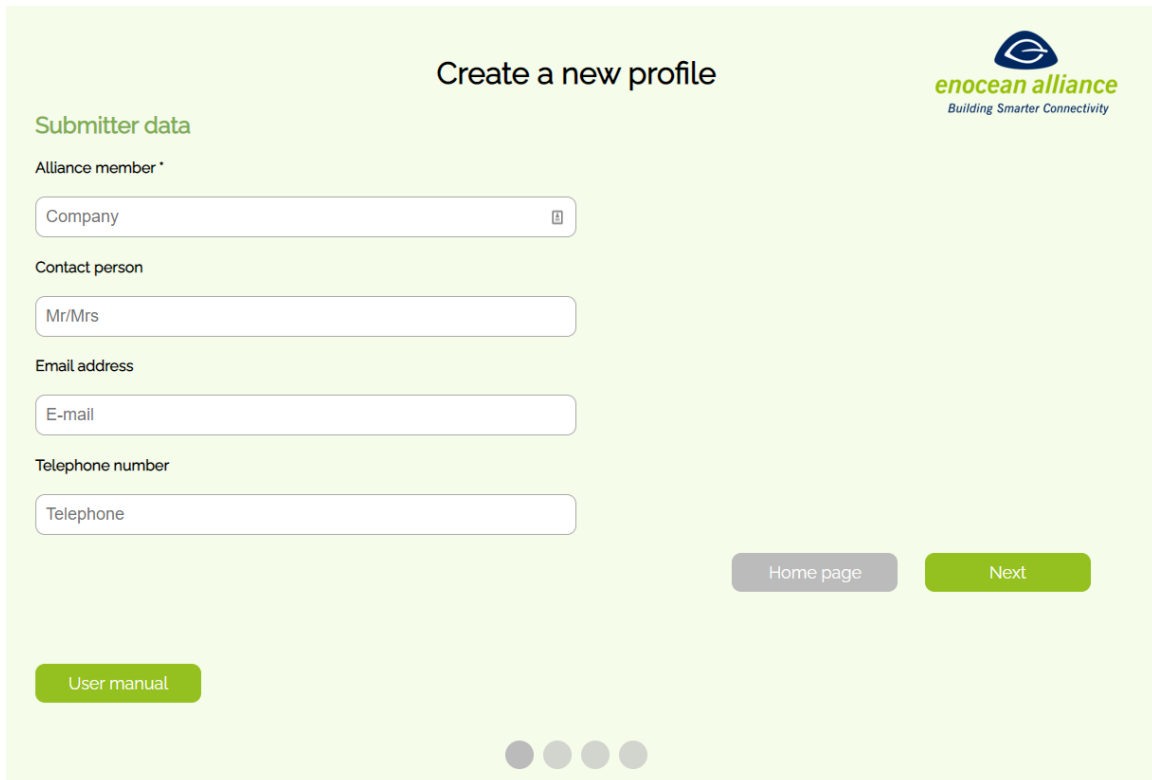

- Alliance member: The name of the company.
- Contact person: The name of the submitter.
- Email address: company or submitter email.
- Telephone number: company or submitter phone number.

All data should be filled in. This will facilitate the processing of the submission by the EAC and the TWG.

Pressing “Next” will progress to the next page, pressing “Home page” will go back to the home screen. The reader can go to the appropriate chapter for his action, but in the next chapter, the principle of creating an EEP will be explained first.

EEP Submission Tool Manual

2.3. Array definition

This chapter is valid for all actions supported by the EEP-tool, and the process of creating the array definition of commands - or parameters - is the same. The following description uses the example to create a new profile data, but it is also valid when creating a new VLD family or adding members to an existing one.

The idea of designing the EEP is that pre-defined keys of EEPs existing already can be selected and reused. All pre-defined keys are in the data base and the user may select an existing key - or, as an exception, add a new key if she/he does not find a fitting one for her/his entry. By working with pre-defined keys, the advantage is that automatically an IP-Representation is available when defining the array structure of a profile.

Array definition

Offset	Key	Size	Description	Range min	Range max	Scale min	Scale max	Unit	Enum	trigger
<div style="display: flex; justify-content: space-between; align-items: center;"> <div style="display: flex; align-items: center;"> <input type="text" value="-Select a key-"/> Add a new key </div> <div style="margin-top: 10px;">Delete the last key</div> </div> <div style="text-align: right; margin-top: 20px;"> Previous Next </div>										

BROADCAST

- handleClosedClick
- handleClosedCounter
- handleOpenedCounter
- handleTiltedCounter
- Heating
- HeatingChannel
- Hemisphere
- Hour
- humidity
- HumidityControl
- HumidityControlStatus
- HumiditySetpoint
- HumidityThreshold
- HumidityValidityFlag
- HydrogenSulfide
- IOChannel
- Illumination
- Illumination1
- Illumination2
- IlluminationEltako

Add a new key

Delete the last key

When the drop-down list is selected, a list of all available pre-defined keys will be shown in alphabetical order and the user can select the appropriate one.

EEP Submission Tool Manual

After a key is selected via the drop-down list, a new row will be filled with correlating default values.

Array definition

Offset	Key	Size	Description	Range min	Range max	Scale min	Scale max	Unit	Enum	trigger
0	temperature	8	Measurement of Temperature	0	255	0	255	°C		

-Select a key-

- **Offset:** This field is automatically calculated by the EEP-Tool depending on the size of the previous rows. It shows the bit offset of the entry.
- **Key:** Is the name of the selected pre-defined key. This field shall only be edited when adding a new key.
- **Size:** Size in Bits of the entry. Default is 8, value may be corrected by the user.
- **Description:** This is the description of the pre-defined key, which is stored in the data base. The description can be edited for a clearer view.
- **Range min:** The field contains the minimum data value of the entry. In most cases it starts with 0, but may be edited for other values.
- **Range max:** The field contains the maximum data value of the entry, depending on the adjusted size. In most cases it is the maximum value $2^{(size)}$, but may also be a different value.
- **Scale min:** Minimum scale value is the representation of the Range min entry in the unit of the entry. For temperature profiles, it is the minimum temperature of the profile. Floating point numbers are allowed.
- **Scale max:** Maximum scale value is the representation of the Range max entry in the unit of the entry. For temperature profiles, it is the maximum temperature of the profile. Floating point numbers are allowed.
- **Unit:** Is the unit of the entry. For a temperature it is in °C.
- **Enum:** This field is used for enum entries. It is important to use the following format:
<enum value>: <enum text> Example: *0: contact open*
 It is also possible to enter ranges of enums in the following format:
<enum value min> ... <enum value max>: <enum text> Example: *17 ... 31: reserved*
 It is allowed to fill the enum field also when entries in the Range and Scales fields are made for entries, where we have additional enums to range fields.
- **Trigger:** select this field if this entry may trigger a telegram transmission.

After editing, the entry may look like this:

Array definition

Offset	Key	Size	Description	Range min	Range max	Scale min	Scale max	Unit	Enum	trigger
0	temperature	8	Measurement of Temperature	0	250	-20	60	°C	255 : not present	X

-Select a key-

EEP Submission Tool Manual

If it is necessary to add a new key, which really should be an exception, this can be done by pressing the “Add a new key” button.

The offset of the new row will be calculated by the size of the previous row(s). If it is necessary to have unused bits in the definition of the profile, just set the size of this row and keep all other columns empty.

If a new key has to be defined, enter the key with its name and fill all the other columns accordingly. Please note that, at this point, the new key will not be stored in the database. This new key will be added only after the release of the submission.

A whole row can be moved up and down by dragging the blue arrows and drop it where it shall become. To delete a row use the red waste box icon.

The following example screen shot shows the array definition for profile D2-14-59:

Array definition											
Offset	Data	Size	Description	Range min	Range max	Scale min	Scale max	Unit	Enum	trigger	
0	Humidity	8	Measurement of Relative Humidity	0	200	0	100	%	255 : Sensor not present		
8	Temperature	10	Measurement of Temperature	0	800	0	80	°C	1023 : Sensor not present		
18	Particulate Matter 10um	9	Measurement PM10	0	510	0	510	ug/m3	511 : Sensor not present		
27	Particulate Matter 2.5um	9	Measurement PM2.5	0	510	0	510	ug/m3	511 : Sensor not present		
36	Particulate Matter 1um	9	Measurement PM1	0	510	0	510	ug/m3	511 : Sensor not present		
45	HCHO	11	Measurement HCHO	0	2000	0	2000	ppb	2047 : Sensor not present		
56	TVOC	16	Measurement of TVOC	0	65000	0	65000	ppb	65535 : Sensor not present		
72	CO2	14	Measurement of CO2	0	10000	0	10000	ppm	16383 : Sensor not present		
86		2	Not Used(=0)								

EEP Submission Tool Manual

2.4. Summary

When all definitions are made, a summary will be shown and the files needed for the submission can be created.

RORG	D2	VLD Telegram
FUNC	14	Multi Function Sensors
TYPE	59	Indoor Multisensor with temperature, humidity, PM, CO2, HCHO and TVOC


Description
Indoor Multisensor with temperature, humidity, PM, CO2, HCHO and TVOC.

Data exchange
Direction to:
Addressing: broadcast.
Communication trigger: event_time_trigger.
Trigger description: Heartbeat and On Change.
Timing description: Sending intervals are device specific.

Offset	Size	Data	Description	Valid Range	Scale	Unit	Trigger
0	8	Humidity	Measurement of Relative Humidity	Enum: 0 ... 200 : 0 ... 100 % 201 ... 254 : Reserved 255 : Sensor not present			
8	10	Temperature	Measurement of Temperature	Enum: 0 ... 800 : 0 ... 80 °C 801 ... 1022 : Reserved 1023 : Sensor not present			
18	9	Particulate Matter 10um	Measurement PM10	Enum: 0 ... 510 : 0 ... 510 ug/m3 511 : Sensor not present			
27	9	Particulate Matter 2.5um	Measurement PM2.5	Enum: 0 ... 510 : 0 ... 510 ug/m3 511 : Sensor not present			
36	9	Particulate Matter 1um	Measurement PM1	Enum: 0 ... 510 : 0 ... 510 ug/m3 511 : Sensor not present			
45	11	HCHO	Measurement HCHO	Enum: 0 ... 2000 : 0 ... 2000 ppb 2001 ... 2046 : Reserved 2047 : Sensor not present			
56	16	TVOC	Measurement of TVOC	Enum: 0 ... 65000 : 0 ... 65000 ppb 65001 ... 65534 : Reserved 65535 : Sensor not present			
72	14	CO2	Measurement of CO2	Enum: 0 ... 10000 : 0 ... 10000 ppm 10001 ... 16382 : Reserved 16383 : Sensor not present			
86	2	Not Used (= 0)					

EEP Submission Tool Manual

2.5. Saving all necessary files for EEP submission

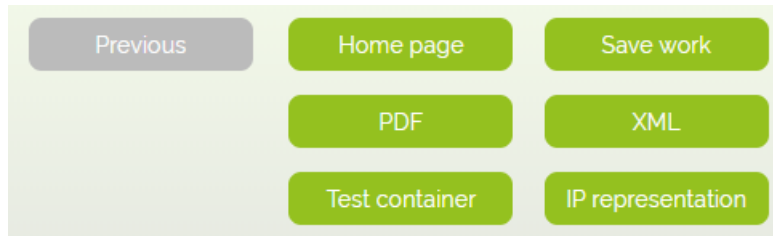

- **Previous:** If a mistake is found or a change is needed, the user can go back one step and re-do it. Do NOT use the “back” button of the browser, otherwise all the entered data is lost. Only use the “previous” button of the tool to navigate back.
- **Home page:** Return back to home interface. **All entered data is lost!**
- **Save work:** Save the current work as .xml file on the local PC. This file may be used when the submitter later wants to return back to his work. It is required by the EAC to make final changes. This file is part of the submission of the proposal.
- **PDF:** A PDF file will be generated and shown in a new tab, but WITHOUT being saved locally. It may be saved in next step using save PDF button. The PDF file is part of the submission of the proposal.
- **XML:** An XML file will be generated and saved on the local PC. This file can be used for testing of the application with tools like Dolphin View. The XML file is part of the submission of the proposal.
- **Test container:** An XML file will be generated and saved on the local PC. This file can be used for testing of the application with the Profile Checking tool. The test container file is part of the submission of the proposal.
- **IP representation:** A PDF file will be generated and saved on the local PC. This file is part of the submission of the proposal.

If there are more than one types of an EEP defined, the test container and IP representation files will be packed each in a zip file.

EEP Submission Tool Manual

RORG	D2	VLD Telegram
FUNC	14	Multi Function Sensors
TYPE	59	indoor Multisensor with temperature, humidity, PM, CO2, HCHO and TVOC

Description

Indoor Multisensor with temperature, humidity, PM, CO2, HCHO and TVOC. .

Data exchange

Direction: to.

Addressing: broadcast.

Communication trigger: event_time_trigger.

Trigger description: Heartbeat and On Change.

Timing description: Sending intervals are device specific.

Offset	Size	Data	Description	Valid Range	Scale	Unit	Trigger
0	8	Humidity	Measurement of Relative Humidity	Enum: 0 ... 200 : 0 ... 100 % 201 ... 254 : Reserved 255 : Sensor not present			
8	10	Temperature	Measurement of Temperature	Enum: 0 ... 800 : 0 ... 80 °C 801 ... 1022 : Reserved 1023 : Sensor not present			
18	9	Particulate Matter 10um	Measurement PM10	Enum: 0 ... 510 : 0 ... 510 ug/m3 511 : Sensor not present			
27	9	Particulate Matter 2.5um	Measurement PM2.5	Enum: 0 ... 510 : 0 ... 510 ug/m3 511 : Sensor not present			
36	9	Particulate Matter 1um	Measurement PM1	Enum: 0 ... 510 : 0 ... 510 ug/m3 511 : Sensor not present			
45	11	HCHO	Measurement HCHO	Enum: 0 ... 2000 : 0 ... 2000 ppb 2001 ... 2046 : Reserved 2047 : Sensor not present			
56	16	TVOC	Measurement of TVOC	Enum: 0 ... 65000 : 0 ... 65000 ppb 65001 ... 65534 : Reserved 65535 : Sensor not present			
72	14	CO2	Measurement of CO2	Enum: 0 ... 10000 : 0 ... 10000 ppm 10001 ... 16382 : Reserved 16383 : Sensor not present			
86	2	Not Used (= 0)					

Save PDF file

Example of a PDF file generated by the EEP-Tool

EEP Submission Tool Manual

2.6. EEP submission

Please submit the

- generated .xml file,
- the .pdf file,
- the test container file
- the IP representation file AND
- the saved work file

to the EnOcean Alliance EEP Approval Committee (EAC) via e-mail (eeep-proposal@enocean-alliance.org).

The submission will be rejected if incomplete!

You may add a .pdf file acting as annex for this profile explaining the product or properties, e.g. providing diagrams or photos etc., to facilitate the understanding of the proposal by the EAC.


EEP Submission Tool Manual

3. Create a new unidirectional VLD profile

This chapter describes all screens for creating a new unidirectional VLD profile, which is no profile family.

After filling in the submitter data (see chapter 2.2.), the profile metadata has to be defined.

3.1. Profile metadata

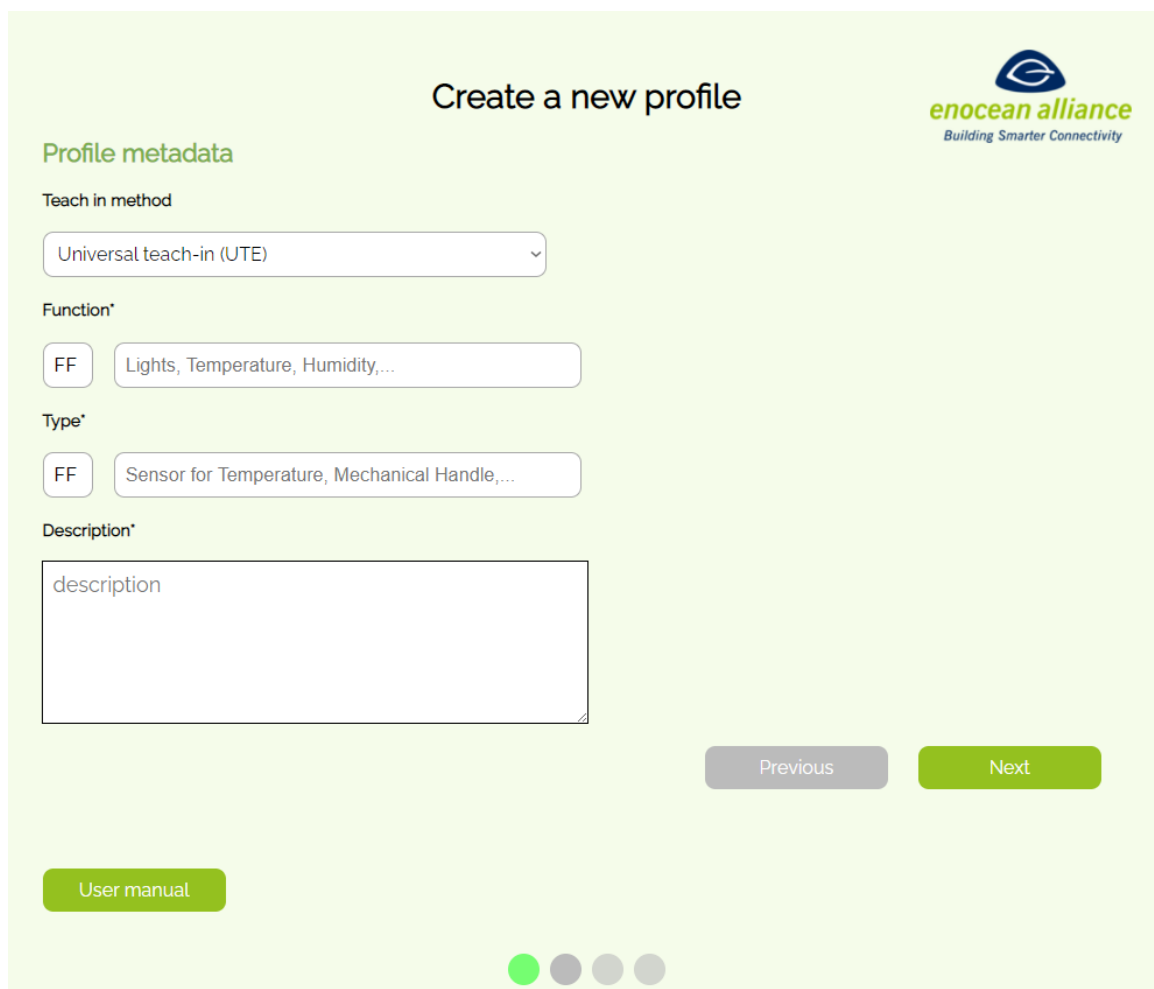


In this screen, the user defines the **profile metadata**.

- Teach-in method: it can be UTE or Smart-Ack teach-in.
- Function- and Type-Numbers: If they are known while entering the submission, they shall be entered here. Otherwise keep the default “FF” and the EAC will assign the numbers during the approval process. Never invent own numbers!
- Function title: If you add a further type of an existing function EEP, copy the same text here. If you assume that a new function will be assigned, find a proper text i.e. the headline or overview of the product

EEP Submission Tool Manual

- Type title: finding the text for the type is the responsibility of the submitter. Find a proper description of this special type of device.
- Description: This is the description of this specific type. It would be good to describe the properties of the profile or changes to other types of the same EEP.

3.2. Functionality definition

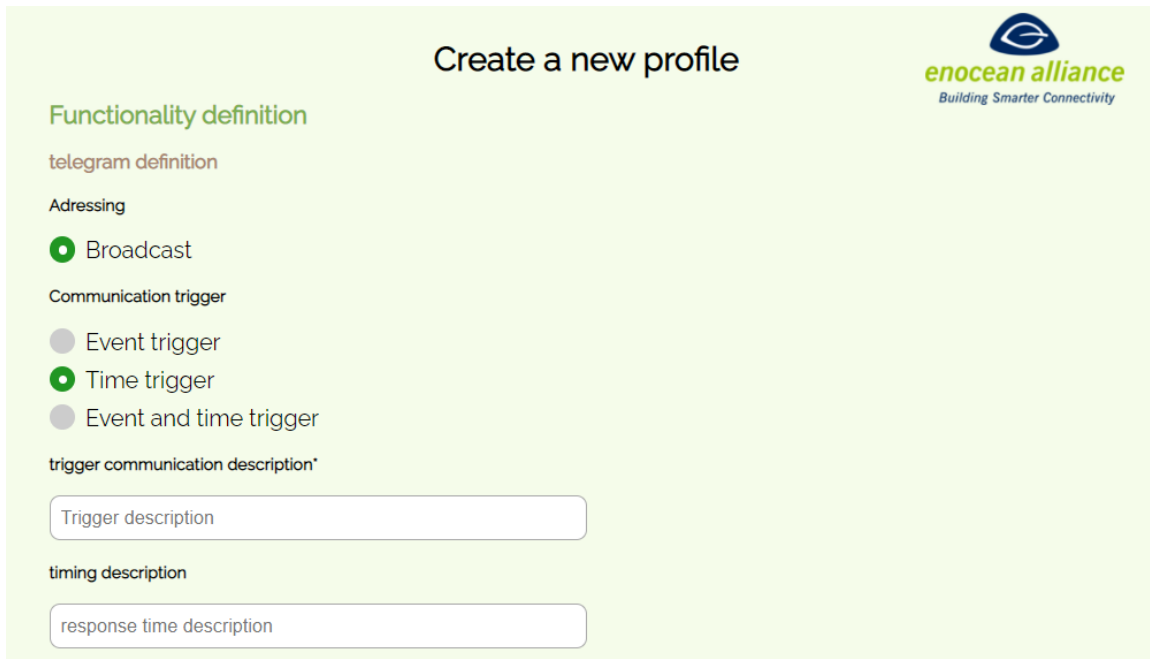

The next step is **functionality definition**, where the submitter defines the telegram characteristic and array structure.

- Addressing: This cannot be changed and is always broadcast.
- Communication trigger: Definition of when a telegram will be sent. This could be an event (i.e. temperature change or pressing a key, a time (heartbeat timeout), a combination of both.
- Trigger communication description: Detailed description of under what conditions a telegram will be sent.
- Timing description: Detailed description about the timing of the telegrams if a time trigger is selected. The timing is to be defined in [ms].

Then the submitter defines the array structure. See chapter 2.3.


When this is done, the summary will be shown and all necessary files for the submission can be created. See chapters 2.5. and 0 how to submit the designed EEP proposal.

EEP Submission Tool Manual

4. Add a new family member to an existing VLD

This chapter describes all screens for adding a new family member to an existing VLD family. After filling in the submitter data (see chapter 2.2.), the profile data has to be defined.

4.1. Profile data

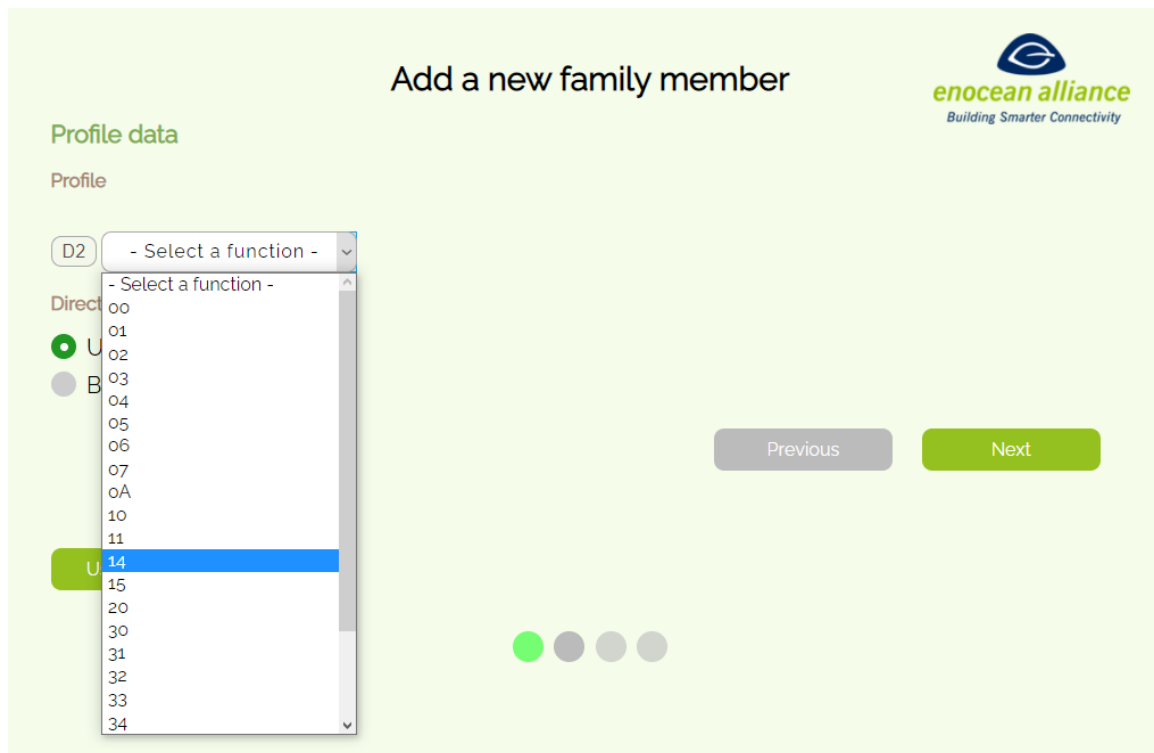

In this screen the user defines the **profile data**.

- **Select a function:** The user has to select the function number of the existing VLD profile family she/he wants to add a new type. Not all existing families are currently in the data base – refer to EEPs in the EEP-Viewer, please. If the family does not appear, return to the home screen and chose “create a new family” to perform the submission process with this action.
- **Direction:** either unidirectional or bidirectional for the new type to add.
- **Set the profile:** After setting the profile by pressing the button *set the profile*, the profile data of the family will be shown. The commands and parameters of the existing data will be listed.

Note: when selecting an extensive family of profiles it might take a few seconds until all data are loaded by the EEP-Tool. You might be required to scroll down.

EEP Submission Tool Manual

Next step is to add a new type to the family by pressing the “Add type” button.

Command overview

commands/types	00	01	02
Status of monocolour LED controller	X	-	<input type="checkbox"/>
Status of RGB LED controller	-	X	<input type="checkbox"/>

The type number can be edited. As default, the next available type number will be set.

Command overview

commands/types	00	01	02
Status of monocolour LED controller	X	-	<input type="checkbox"/>
Status of RGB LED controller	-	X	<input type="checkbox"/>
<input type="text" value="Enter command name"/>	-	-	<input checked="" type="checkbox"/>

Now it is possible to add a new command to the new type by pressing the “Add a new command” button.

Edit the new command name and set the check boxes of the new type column for that command, which the new type will support.

It is possible to delete the last command by pressing the “Delete the last command” button.

EEP Submission Tool Manual

Parameter overview

parameters..types of	00	01	02
4Phenylcyclohexene	X	X	<input type="checkbox"/>
AbsoluteRelativePowerUsage	-	X	<input type="checkbox"/>
Acetaldehydeue	-	X	<input type="checkbox"/>
AceticAcid	-	X	<input type="checkbox"/>
ButtonA0	X	X	<input type="checkbox"/>
buttonRight	X	X	<input type="checkbox"/>
DateDayMonth	X	X	<input type="checkbox"/>
DaylightHarvesting	X	X	<input checked="" type="checkbox"/>
DemandResponse	X	X	<input type="checkbox"/>
Dim value	X	-	<input checked="" type="checkbox"/>
dimValueBlue	-	X	<input type="checkbox"/>
dimValueGreen	-	X	<input type="checkbox"/>
dimValueRed	-	X	<input type="checkbox"/>
LEDOuputEnabled	X	-	<input type="checkbox"/>
MsgId	X	X	<input checked="" type="checkbox"/>
Occupancy	X	X	<input type="checkbox"/>
Status tx reason	X	X	<input type="checkbox"/>

Add a new key

Each TYPE has to support all telegrams and parameters marked in its column


Now it is possible to add a new parameter to the new type by selecting an existing key. If there is no existing key possible, you can add a new key by pressing the “Add a new key” button.

Edit the new key name and then set the check boxes of the new type column for those parameters, which the new type will support.

It is possible to delete the last parameter by pressing the “Delete the last key” button.

EEP Submission Tool Manual

4.2. Functionality definition



enocean alliance
Building Smarter Connectivity

Add a new family member

Functionality definition

Type title*

Type Description*

Command: bla
type: 02

Addressing

Unicast

Broadcast

Unicast or broadcast (application specific)

Communication trigger

Event trigger

Time trigger

Event and time trigger

Response to CMD

trigger event description*

timing description*

The next step is **functionality definition**, where the submitter defines the telegram characteristic and array structure for each defined command for the new type.


- **Type title:** Find a proper text which summarizes the functionality of the new type
- **Description:** This is the description of the new type.
- **Addressing:** Specify if the type requests communication addressed (unicast, Addressed Data Telegram) or broadcast or application specific both.
- **Communication trigger:** Definition of when this command will be sent. Could be an event (i.e. temperature change or pressing a key, a time (heartbeat timeout), a combination of both, or a response to a previously sent CMD request.
- **Trigger communication description:** Detailed description of under which conditions this command will be sent.
- **Timing description:** Detailed description about the timing of the telegrams if a time trigger is selected. The timing is to be defined in [ms].

EEP Submission Tool Manual

Then the submitter defines the array structure for each command. See chapter 2.3. When this is done, the summary will be shown and all necessary files for the submission can be created. See chapters 2.5. and 0 how to submit the designed EEP proposal.

5. Create a new VLD family

5.1. Profile metadata

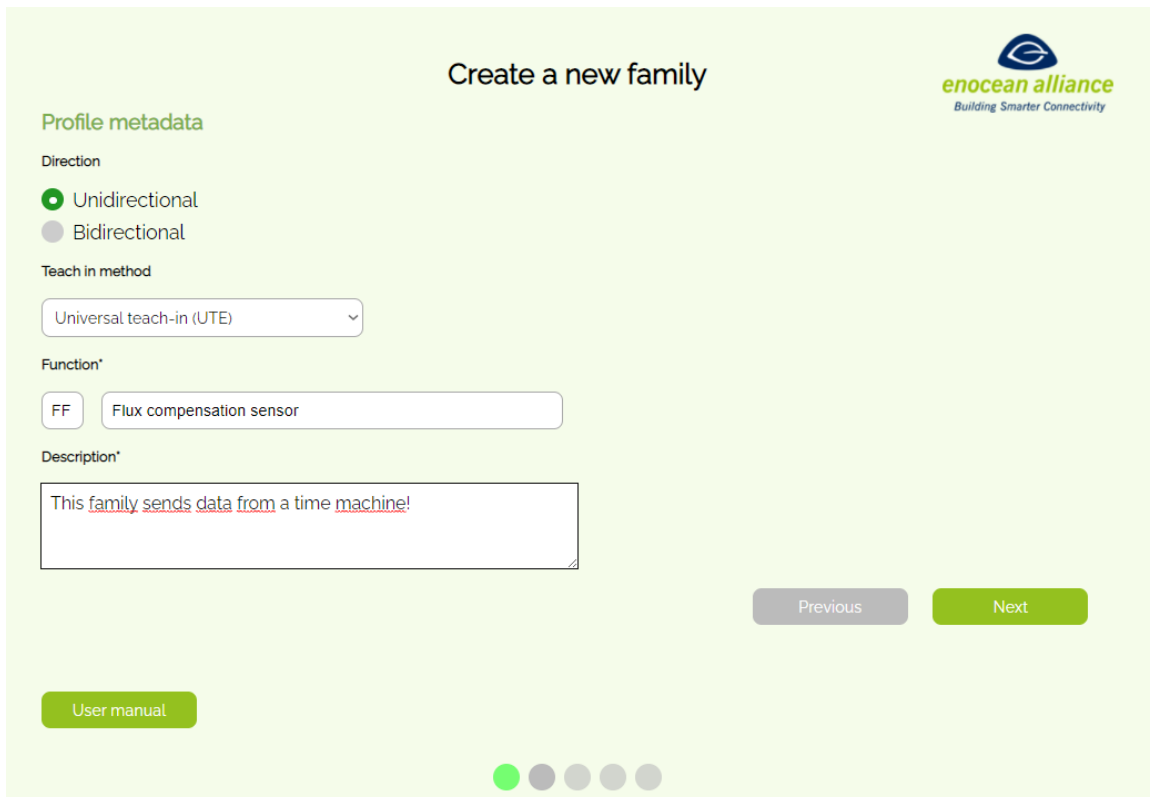

The screenshot shows a web form titled "Create a new family" with the enocean alliance logo in the top right. The form is divided into several sections:

- Profile metadata**: This section contains the following fields:
 - Direction**: Two radio buttons, "Unidirectional" (selected) and "Bidirectional".
 - Teach in method**: A dropdown menu currently showing "Universal teach-in (UTE)".
 - Function***: A small input field containing "FF" and a larger text input field containing "Flux compensation sensor".
 - Description***: A large text area containing the text "This family sends data from a time machine!".
- Navigation**: At the bottom right, there are two buttons: "Previous" (disabled) and "Next" (active). At the bottom left, there is a "User manual" button. At the very bottom center, there are five small circular indicators, with the first one being green and the others grey.

In this screen the user defines the **profile metadata**.

- **Direction**: Define if this family has unidirectional profiles or if they are bidirectional
- **Teach-in method**: it could be UTE or Smart-Ack teach-in.
- **Function number**: If the number of the new VLD family is known at the moment of the submission, it shall be entered here. Otherwise, keep the default "FF". The EAC will review and assign the number during the approval process. Don't invent own numbers.
- **Function title**: Find a proper text which summarizes the functionality of the new family
- **Description**: This is the description of the profile family.

EEP Submission Tool Manual

5.2. Tables definition

Create a new family

Tables definition

Number of types*

Number of commands*

Number of parameters*

Command overview

Parameter overview

Each TYPE has to support all telegrams and parameters marked in its column

In this screen the user defines the **tables** of the new family.

- Number of types: Enter the number of family members.
- Number of commands: Enter the number of commands this family will have. It is allowed that a family or single members of a family have no commands
- Number of parameters: Enter the number of parameters for ALL members. In the next screen these parameters are available for filling in the arrays.

When all the numbers are set, press “Create command table” and “Create parameter table” to create both tables.

EEP Submission Tool Manual

Create command table

commands..types of	00	01
Get current date and time	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Set target date and time	<input type="checkbox"/>	<input checked="" type="checkbox"/>

Parameter overview

Create parameter table


parameters..types of	00	01
DateDayMonth	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Time24	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
CmdId	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Each TYPE has to support all telegrams and parameters marked in its column

Enter all the command and parameter names and adjust the selection of commands and parameters for each type. Use existing keys by selecting and the next empty parameter field will be filled with the key selected. If defining a new key edit it in the table directly.

EEP Submission Tool Manual

5.3. Functionality definition



enocean alliance
Building Smarter Connectivity

Create a new family

Functionality definition

Type title*

Type Description*

This type returns the current date and time from the Dolorean

Command: Get current date and time
type: oo

Addressing

Unicast

Broadcast

Unicast or broadcast (application specific)

Communication trigger

Event trigger

Time trigger

Event and time trigger

Response to cmd trigger

trigger event description*

Switching on the flux system

The next step is **functionality definition**, where the submitter defines the telegram characteristics and array structure for each defined command of all types.


- Type title: Find a proper text which summarizes the functionality of the new type
- Description: This is the description of the new type.
- Addressing: Specify if the type requests communication addressed (unicast, **Addressed Data Telegram**) or broadcast or application specific both.
- Communication trigger: Definition of when this command will be sent. Could be an event (i.e. temperature change or pressing a key, a time (heartbeat timeout), a combination of both, or a response to a previously sent CMD request.
- Trigger event description: Detailed description of under which conditions this command will be sent.
- Timing description: Detailed description about the timing of the telegrams if a time trigger is selected. The timing is to be defined in [ms].

Then the submitter defines the array structure for each command. See chapter 2.3.

When this is done, the summary will be shown and all necessary files for the submission can be created. See chapters 2.5. and 0how to submit the designed EEP proposal.

EEP Submission Tool Manual

6. Upload a saved work file

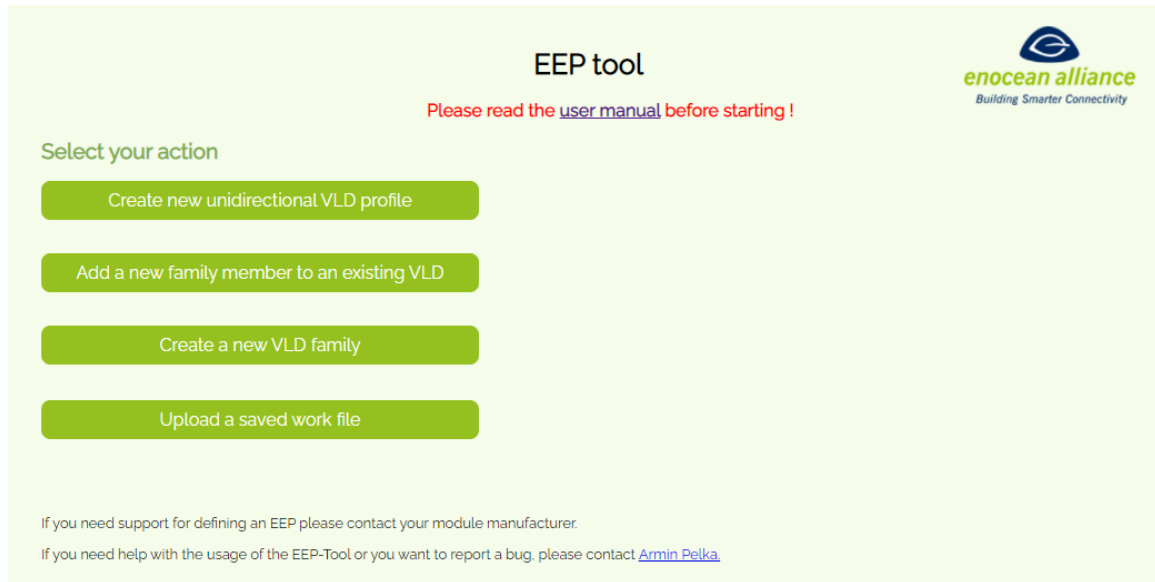


The screenshot shows the 'EEP tool' interface. At the top right is the 'enocean alliance' logo with the tagline 'Building Smarter Connectivity'. Below the logo, the text 'EEP tool' is centered, followed by a red warning: 'Please read the [user manual](#) before starting!'. Underneath, the heading 'Select your action' is followed by four green buttons: 'Create new unidirectional VLD profile', 'Add a new family member to an existing VLD', 'Create a new VLD family', and 'Upload a saved work file'. At the bottom, there are two lines of support information: 'If you need support for defining an EEP please contact your module manufacturer.' and 'If you need help with the usage of the EEP-Tool or you want to report a bug, please contact [Armin Pelka](#)'.

When pressing “upload a saved work file” the user selects a saved work file in order to return to a previous item of work, so there is no need to repeat the whole process if a change is needed. Then a 5th button appears to select the loaded work file and the user finds all pages filled with his saved values.

EEP Submission Tool Manual

7. Upload an XML file

When pressing “Upload an XML file” the user selects an existing EEP XML file and has then the possibility to create EEP related documents.

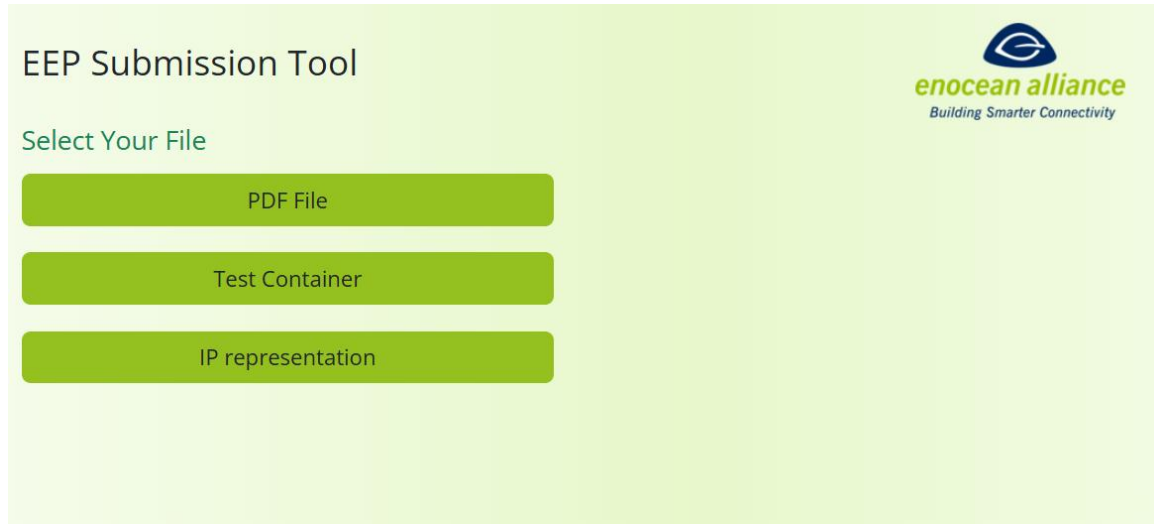

There are 3 options available:

- PDF File
Creates the pdf file of the EEP.
- Test Container
Creates the test container file(s) of the EEP.
- IP representation
Creates the IP representation of the EEP.